


Spare Compass Exchange of Compass



Remove cover from Binnacle



Open fixture of compass suspension

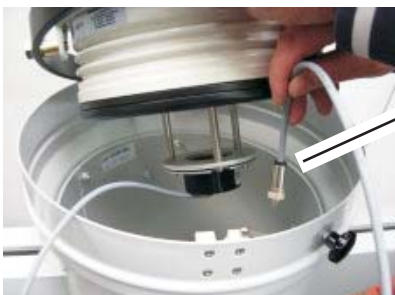

When lifting the compass watch & unplug detector cable, if any!
(Detector cable is connected by plug to junction box located behind cover near to binnacle base or on the upper level inside binnacle column, see next picture)



When inserting replacement compass make sure not to obstruct

reflection sight and use

smaller cut-out to lead down detector cable to the binnacle base



Always store compass upside down to protect needle of directional system.

Do not lay down the compass onto it's centre pivot, use a plate with hole for it!